

SERVICE TOOLS



LEVELING AND ALIGNMENT TOOL



Tank Leveling and Control Valve Alignment Tool For Use with 4 inch Top Tanks (P/N LC-D1307)

This installation tool will assist in properly aligning the face of the control valve and leveling the tank.

DIRECTIONS FOR USE

Step 1

Thread the Leveling and Alignment Tool onto the control valve. Make note of the number that is facing the front of the control valve.



Step 2

Unthread the Leveling and Alignment Tool from the control valve and thread it onto the tank that the control valve will be paired with. On the Leveling and Alignment Tool, locate the number that was facing the front of the control valve and rotate the tank so that number is facing the direction you want the front of the tank to be.



Step 3

Level the tank using the four bubble levels built into the Leveling and Alignment Tool.

Remove the Leveling and Alignment Tool from the tank.

